



FLIPPIN' BRILLIANT.

MOTOROLA BACKFLIP™ with MOTOBLUR™

Welcome

MOTOROLA **BACKFLIP** with MOTOBLUR syncs contacts, posts, feeds, messages, e-mails, photos and much more—from sources like Facebook, Twitter, MySpace, Google Mail, Yahoo, your work e-mail, Picasa, Photobucket and LastFM—and serves it up just the way you want it.

Your phone

Most of what you need is on the touchscreen and three simple keys on the front:

- **Home:** Go to the home screen.
- **Menu:** Open menu options.
- **Back:** Go back one screen.

If you want a full keyboard (good for texting or searching in your **Contacts** list), just flip open your phone—the screen spins to stay the right way up.

With your phone open, you can also flick and double-tap the square touch pad on the back of the display!

 


Let's go

Let's get you up and running.

Tip: Your phone comes with a microSD memory card already installed. It's right next to your SIM card.

Caution: Before assembling, charging or using your phone for the first time, please read the important **Safety, Regulatory & Legal** information provided with your phone.

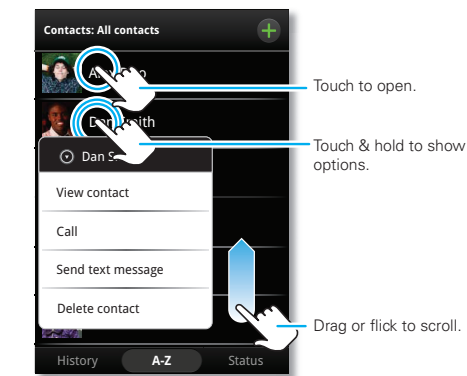

Home

The *home screen* gives you all your latest information in one place. It's what you see when you turn on the phone or touch Home (⌂) from a menu.

Use the widgets, shortcuts and panels to see what's important to you—whether it's home, work or play.

Tip: If your screen goes to sleep, press Power (⏻) to wake it up.

 



Personalise

Go ahead, add your personal touch. Change your widgets, wallpaper, ringtone and more—make it yours.

• **Home screen:** To add something or change your wallpaper, touch and hold an empty spot until you see the **Add to Home screen** menu.

Tip: To move or delete something, touch and hold it, then drag it to another spot, another panel or the bin.

• **Ringtones & sounds:** Touch Menu (☰) > **Settings** > **Sound & ringtones**.

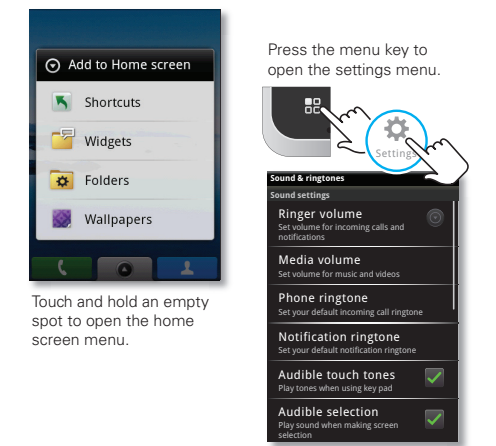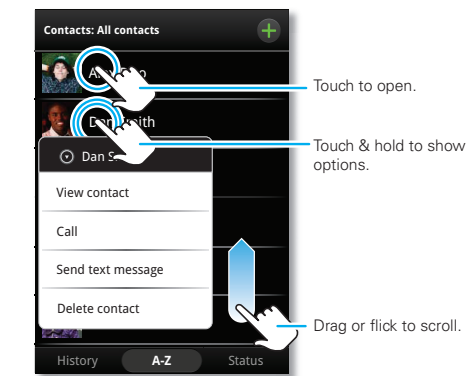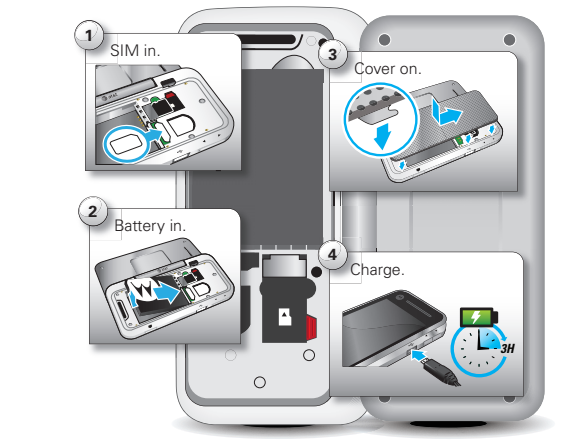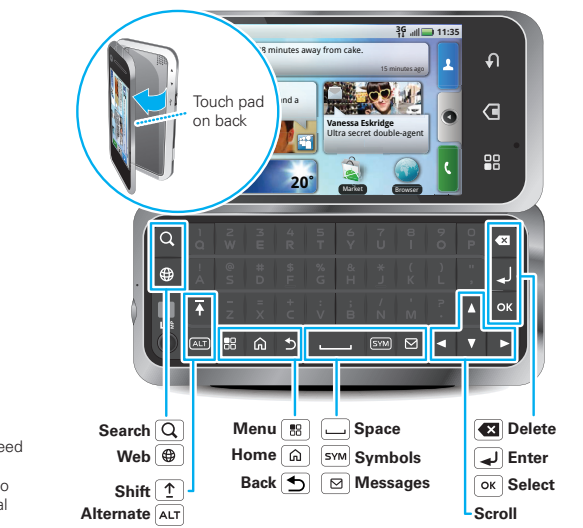


 
MOTOROLA and the stylised M Logo are registered in the US Patent & Trademark Office. The MOTOBLUR logo is a trademark of Motorola. The Bluetooth trademarks are owned by their proprietor and used by Motorola, Inc. under licence. Microsoft, Windows, Windows Me and Windows Vista are registered trademarks of Microsoft Corporation in the United States and other countries. Facebook is a trademark of Facebook, Inc. Google, YouTube, Picasa, Gmail and the Google logo are trademarks of Google, Inc. **WiFi** is a Certification Mark of the Wireless Fidelity Alliance, Inc. All other product or service names are the property of their respective owners. © 2009 Motorola, Inc. All rights reserved.


 
Caution: Changes or modifications made in the radio phone, not expressly approved by Motorola, will void the user's authority to operate the equipment. MOTOROLA **BACKFLIP** with MOTOBLUR (MB300) Manual Number: 68004116007



68004116007



Apps

 
You can find all of your apps in one place. From the home screen, just touch  or Home  to open and close the app tray.

Tip: To find an app in the app tray, touch  or Home  and type the app name.

Want more? No problem: To download more apps, touch  >  **Market**.



Open the app tray and touch **Market**

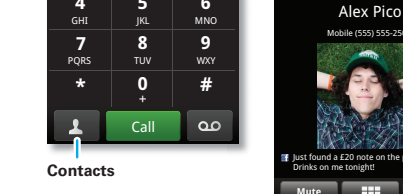

Applications

Games

Search

My downloads

Contacts

Dial Pad

End Call

Call Lists

During a call:

Call Timer

Active call (00:12)

Alex Pico

Mobile (555) 355-2505

Mute

Speaker

End call

Contacts

Call Lists

During a call:

Call Timer

Active call (00:12)

Alex Pico

Mobile (555) 355-2505

Mute

Speaker

End call

Contacts

Call Lists

During a call:

Call Timer

Active call (00:12)

Alex Pico

Mobile (555) 355-2505

Mute

Speaker

End call

Contacts

Call Lists

During a call:

Call Timer

Active call (00:12)

Alex Pico

Mobile (555) 355-2505

Mute

Speaker

End call

Contacts

Call Lists

During a call:

Call Timer

Active call (00:12)

Alex Pico

Mobile (555) 355-2505

Mute

Speaker

End call

Contacts

Call Lists

During a call:

Call Timer

Active call (00:12)

Alex Pico

Mobile (555) 355-2505

Mute

Speaker

End call

Contacts

Call Lists

During a call:

Call Timer

Active call (00:12)

Alex Pico

Mobile (555) 355-2505

Mute

Speaker

End call

Contacts

Call Lists

During a call:

Call Timer

Active call (00:12)

Alex Pico

Mobile (555) 355-2505

Mute

Speaker

End call

Contacts

Call Lists

During a call:

Call Timer

Active call (00:12)

Alex Pico

Mobile (555) 355-2505

Mute

Speaker

End call

Contacts

Call Lists

During a call:

Call Timer

Active call (00:12)

Alex Pico

Mobile (555) 355-2505

Mute

Speaker

End call

Contacts

Call Lists

During a call:

Call Timer

Active call (00:12)

Alex Pico

Mobile (555) 355-2505

Mute

Speaker

End call

Contacts

Call Lists

During a call:

Call Timer

Active call (00:12)

Alex Pico

Mobile (555) 355-2505

Mute

Speaker

End call

Contacts

Call Lists

During a call:

Call Timer

Active call (00:12)

Alex Pico

Mobile (555) 355-2505

Mute

Speaker

End call

Contacts

Call Lists

During a call:

Call Timer

Active call (00:12)

Alex Pico

Mobile (555) 355-2505

Mute

Speaker

End call

Contacts

Call Lists

During a call:

Call Timer

Active call (00:12)

Alex Pico

Mobile (555) 355-2505

Mute

Speaker

End call

Contacts

Call Lists

During a call:

Call Timer

Active call (00:12)

Alex Pico

Mobile (555) 355-2505

Mute

Speaker

End call

Contacts

Call Lists

During a call:

Call Timer

Active call (00:12)

Alex Pico

Mobile (555) 355-2505

Mute

Speaker

End call

Contacts

Call Lists

During a call:

Call Timer

Active call (00:12)

Alex Pico

Mobile (555) 355-2505

Mute

Speaker

End call

Contacts

Call Lists

During a call:

Call Timer

Active call (00:12)

Alex Pico

Mobile (555) 355-2505

Mute

Speaker

End call

Contacts

Call Lists

During a call:

Call Timer

Active call (00:12)

Alex Pico

Mobile (555) 355-2505

Mute

Speaker

End call

Contacts

Call Lists

During a call:

Call Timer

Active call (00:12)

Alex Pico

Mobile (555) 355-2505

Mute

Speaker

End call

Contacts

Call Lists

During a call:

Call Timer

Active call (00:12)

Alex Pico

Mobile (555) 355-2505

Mute

Speaker

End call

Contacts

Call Lists

During a call:

Call Timer

Active call (00:12)

Alex Pico

Mobile (555) 355-2505

Mute

Speaker

End call

Contacts

Call Lists

During a call:

Call Timer

Active call (00:12)

Alex Pico

Mobile (555) 355-2505

Mute

Speaker

End call

Contacts

Call Lists

During a call:

Call Timer